
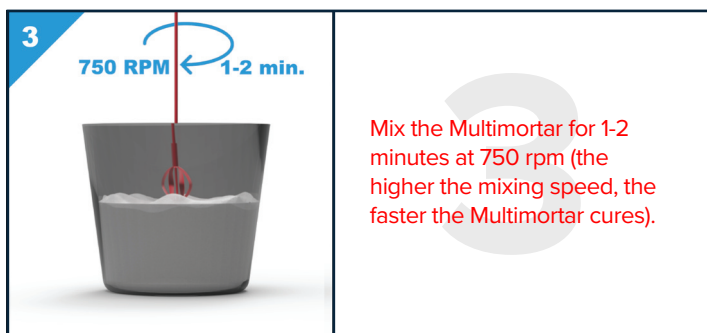
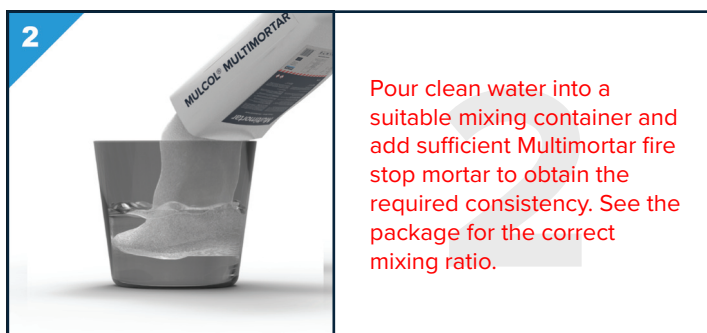


Installation Manual

Multimortar

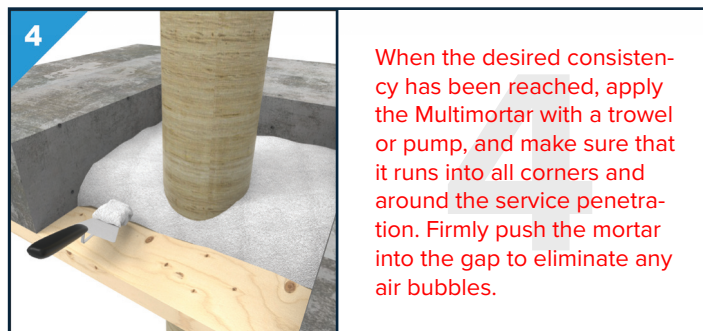

The Multimortar has been tested in many applications i.a. in combination with rock wool Multimastic FB firestop board, Multiwrap, Multicollar *Slim* fire collar and Multisealant GR. For more information about all the solutions available, see our website at www.mulcol.com

Attention:

If the mortar seal is required to have bearing capacity, refer to the instructions in the Technical Data Sheet.

Untreated metal service penetrations that pass through a fireproof seal must be protected against corrosion with a suitable primer/protection system.

Combined with rock wool Multimastic FB firestop boards the firestop board, outside fire resistance, serves as a formwork.

The Multimastic FB firestop boards must be applied carefully. Small openings can be sealed with Multimastic SP firestop mastic.

If you need to apply Multimortar in hollow floorboards, the cavity can be fitted with a formwork or it can be closed off with rock wool.



For use and for more information about an application, refer to the Mulcol documentation, local and international approvals. See the **Mulcol Fire Protection app** for the correct application in combination with fire resistance, or use our selector at www.mulcol.com
For professional use only.

